
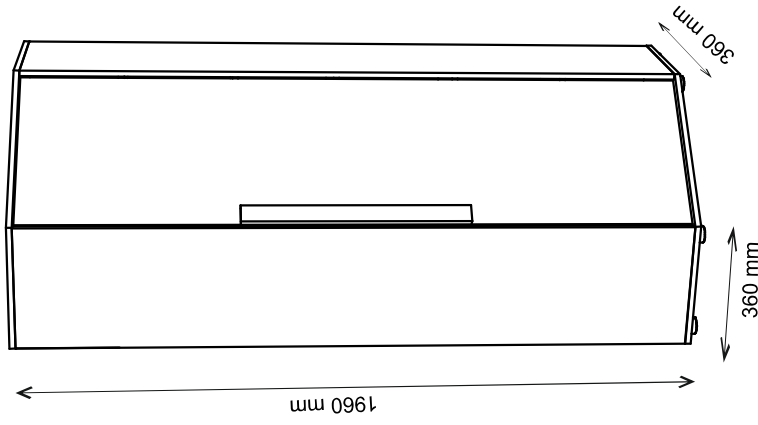
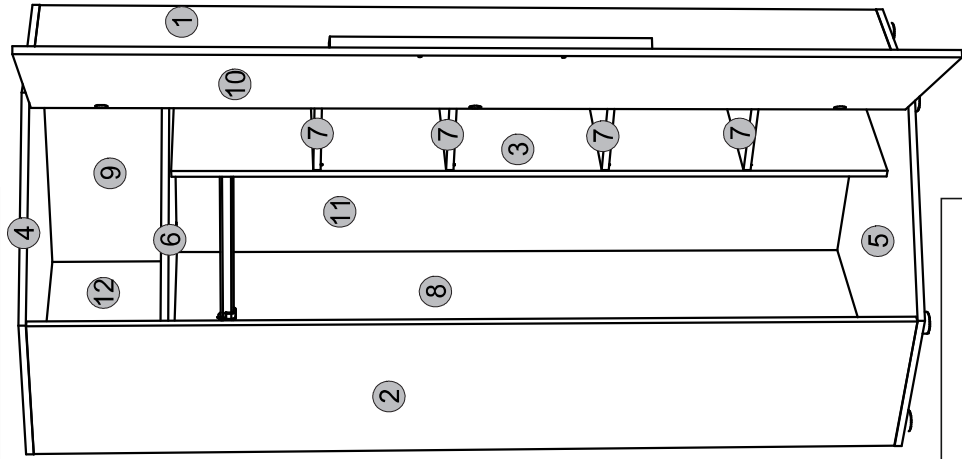
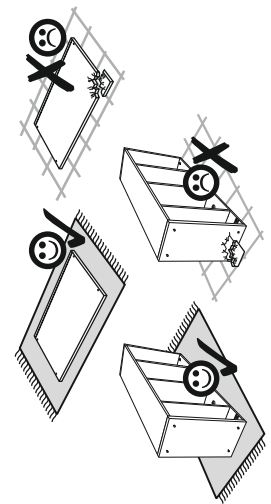
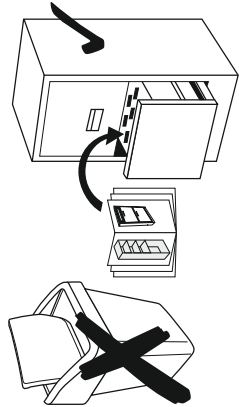
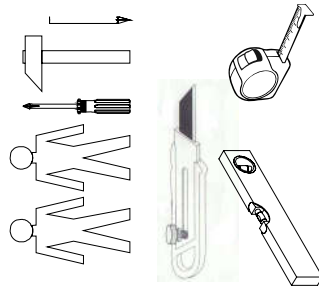
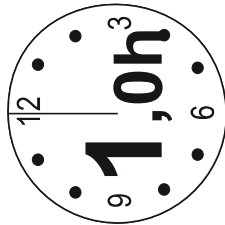


Instalation manual
ALEX: Wardrobe corner

ALEX: Wardrobe corner

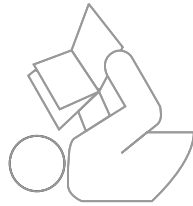


Element symbol	Dimensions				Code	Package
	1	1908	355	16		
1	1908	355	16	1	A-124	1/1
2	1908	355	16	1	A-125	1/1
3	1612	300	16	1	A-126	1/1
4	710	710	16	1	A-213	2/2
5	710	710	16	1	A-214	2/2
6	693	693	16	1	A-310	2/2
7	297	225	16	4	A-311	2/2
8	1612	693	16	1	A-403	2/2
9	280	693	16	1	A-404	2/2
10	1902	470	16	1	A-019	3/3
11	1630	695	3	1	A-617	2/2
12	298	695	3	1	A-618	2/2


20x		s1	ø16
6x		s2	
2x			n301
5x		k43	48 (10mm)
6x		r1	ø15,12mm 3/16
6x		r16	
2x		p26	ø4,52 mm
12x		p25	ø5,516 mm
1x		z1	




1

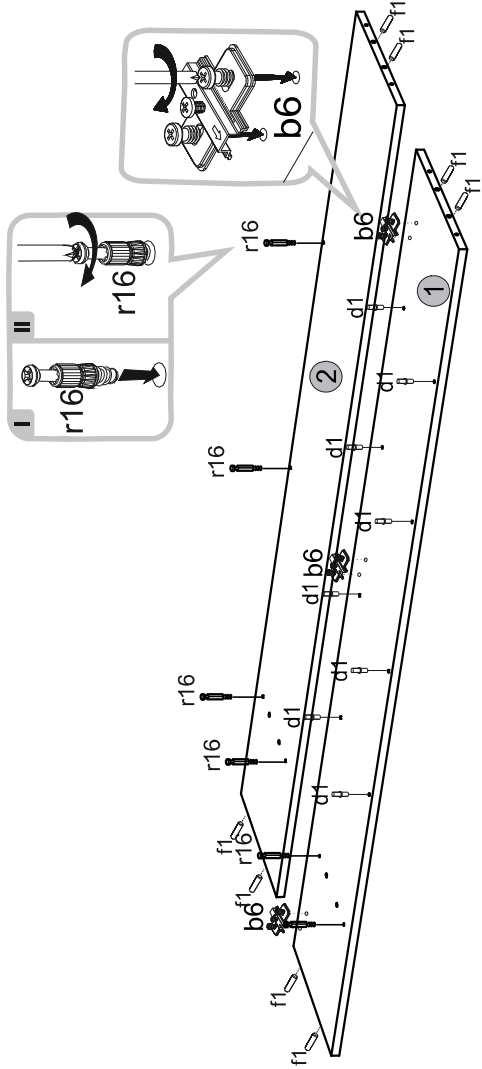


3

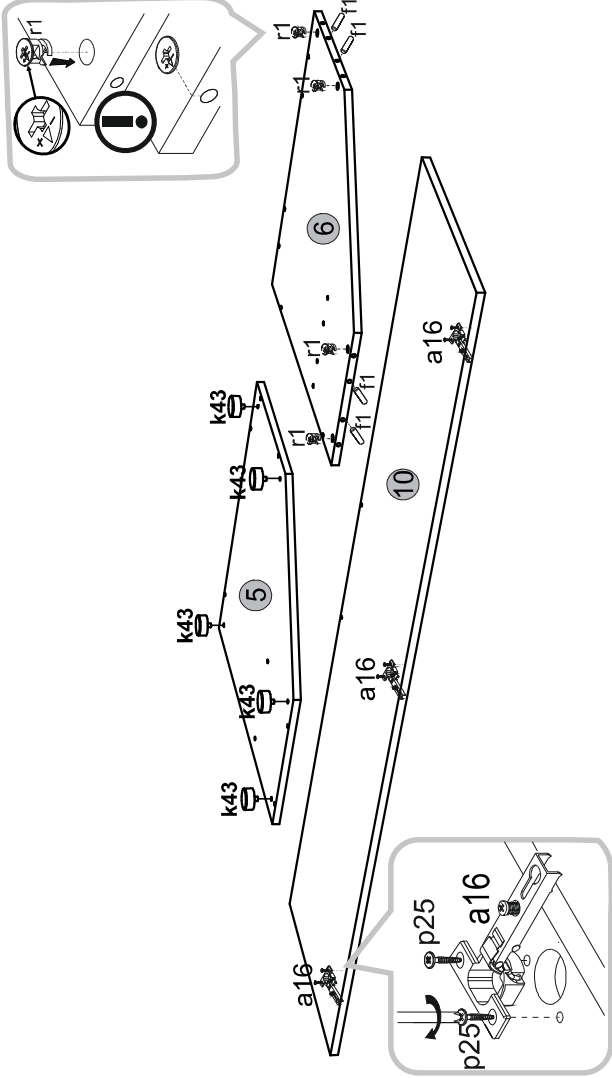


2

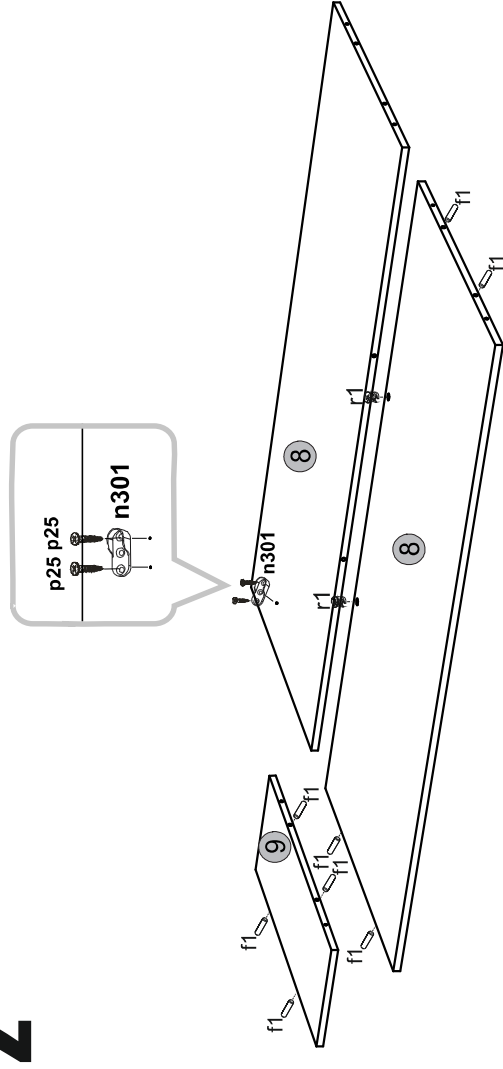


4

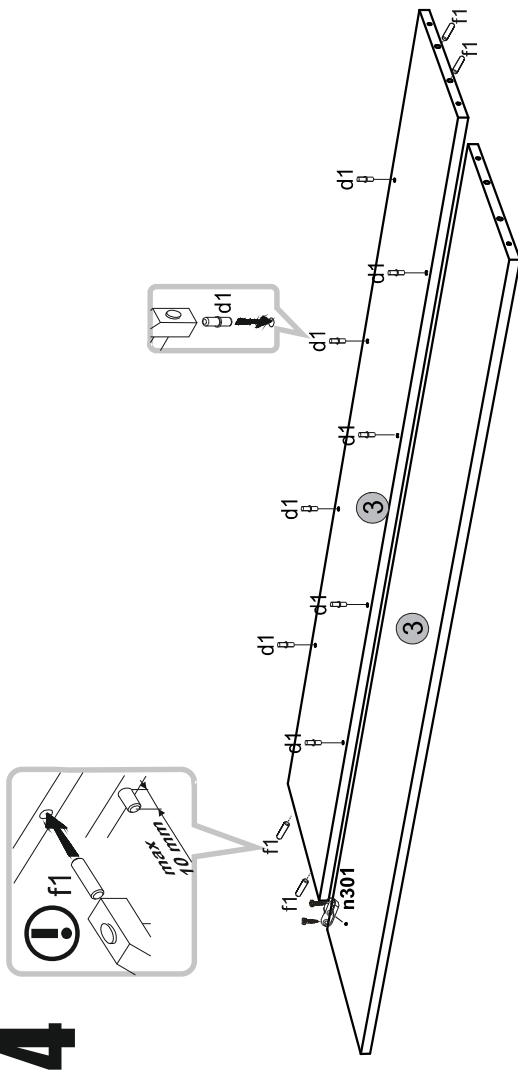


5

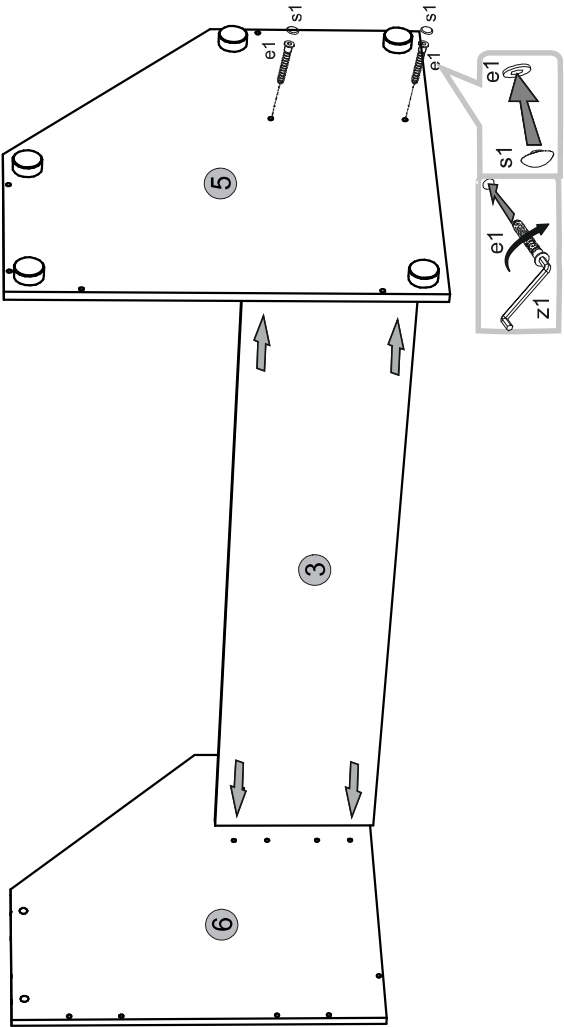


7

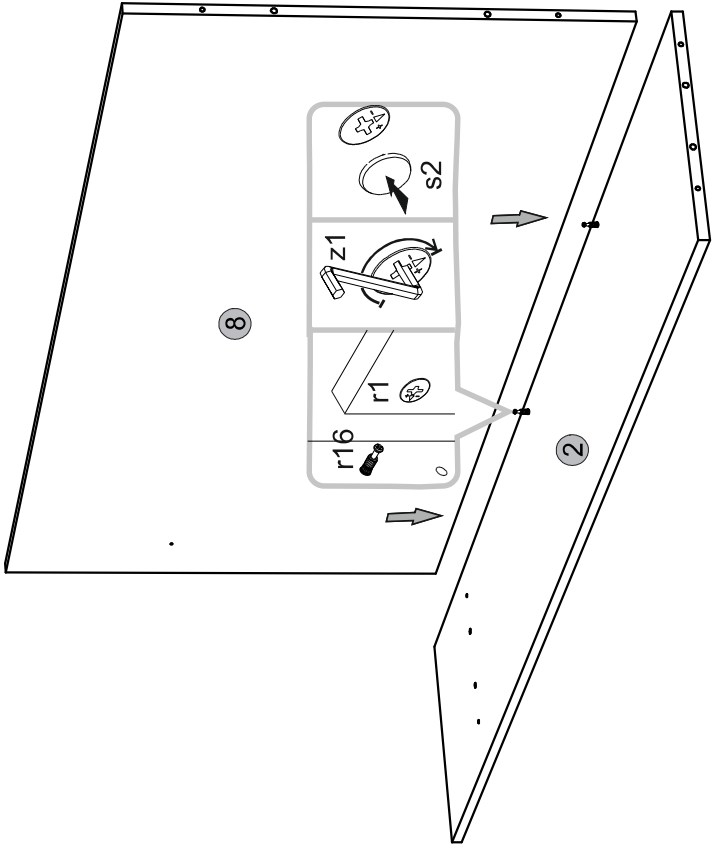


6

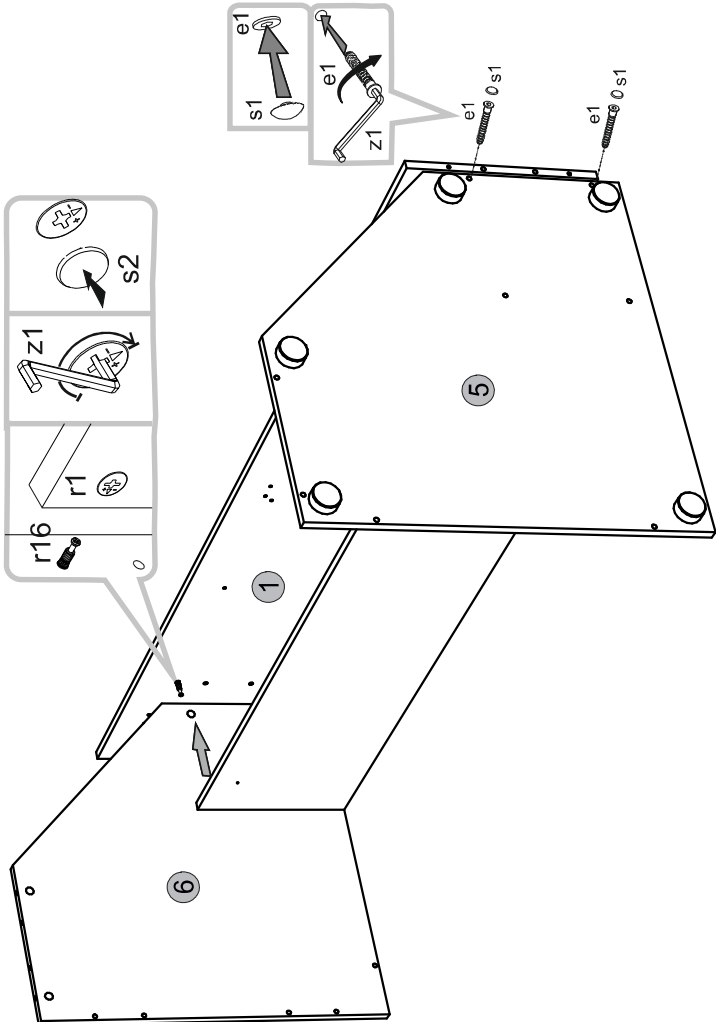


8

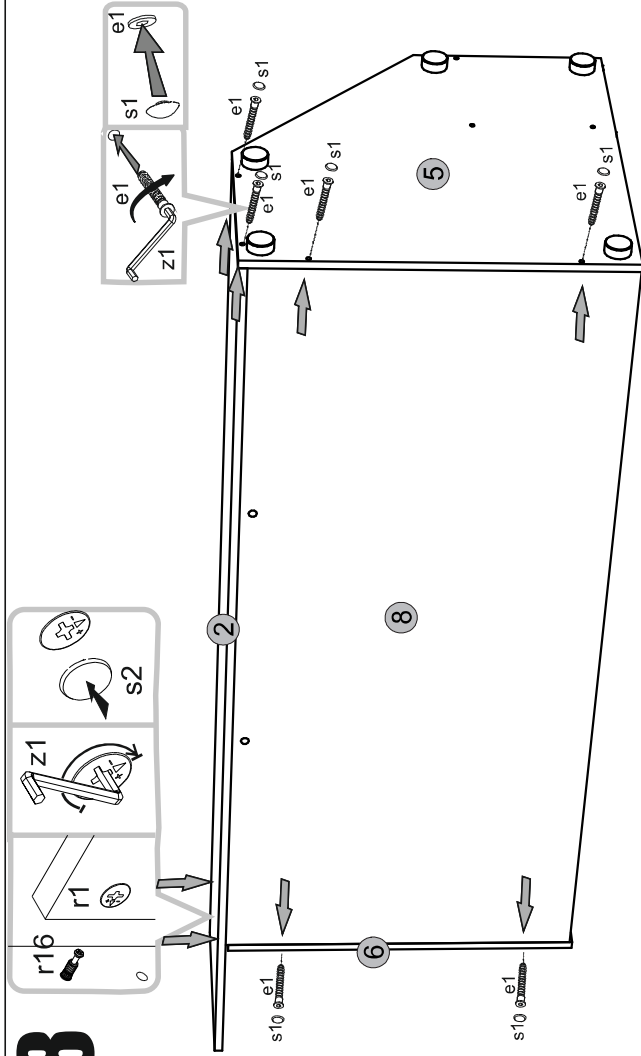

9

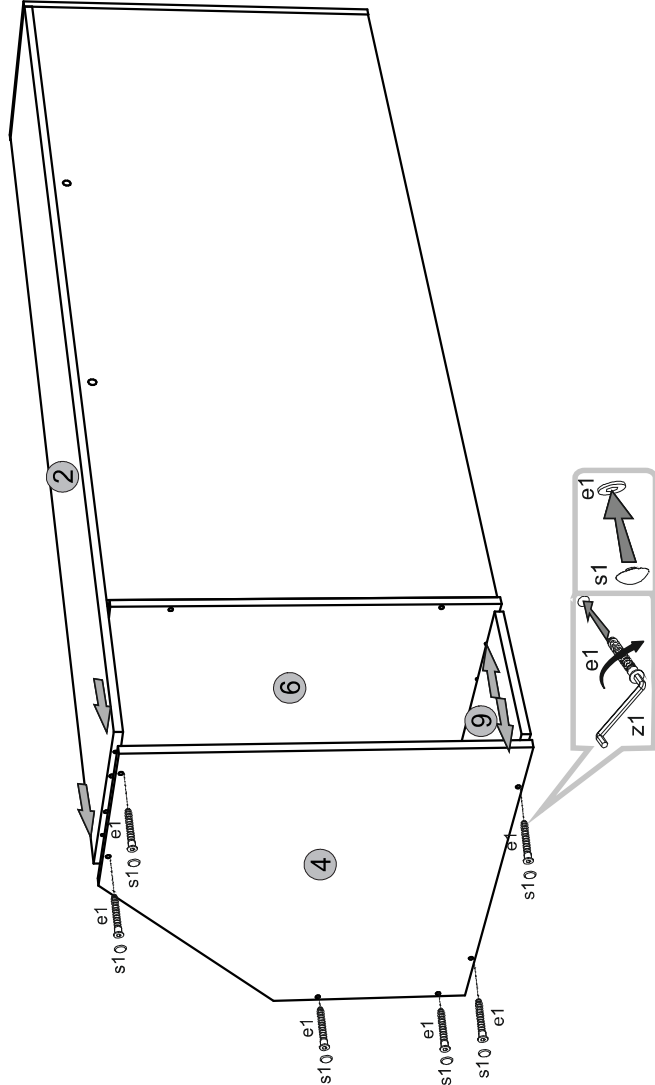

11

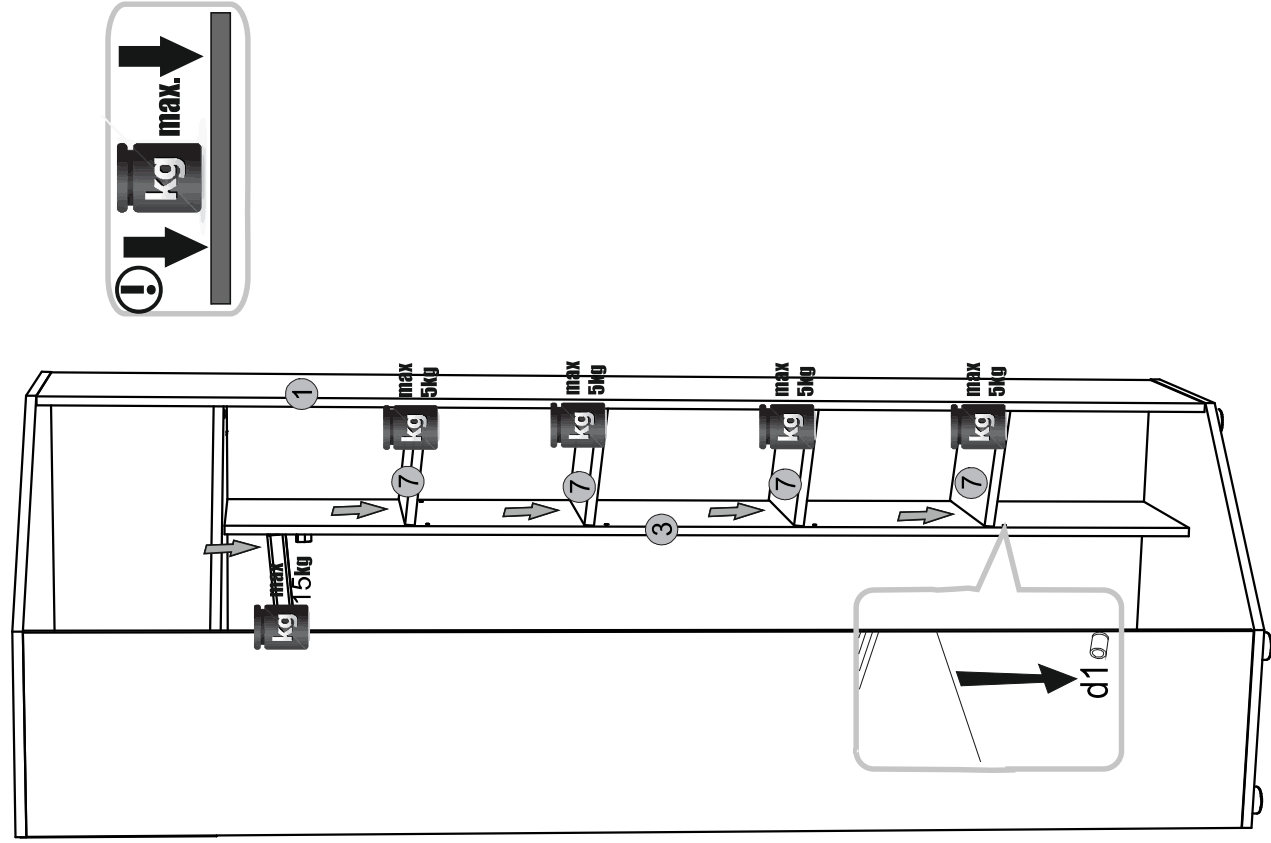

10

