
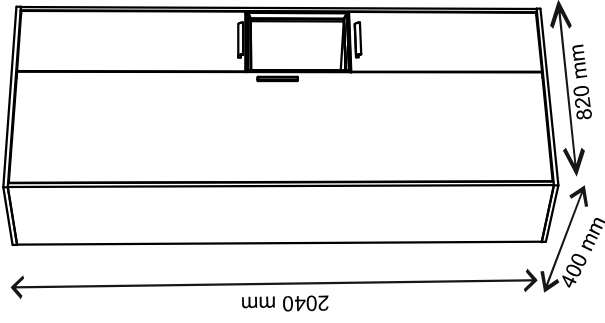
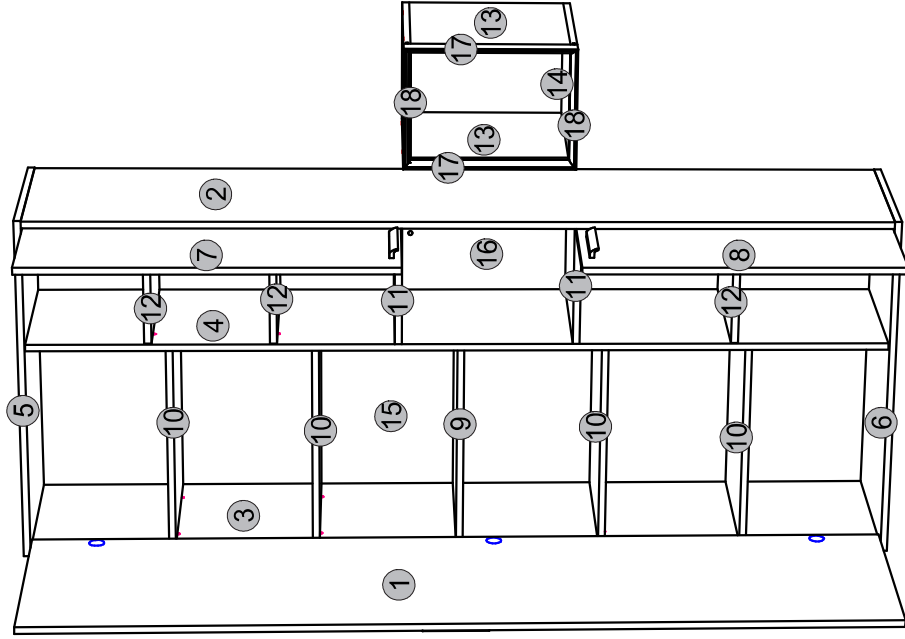
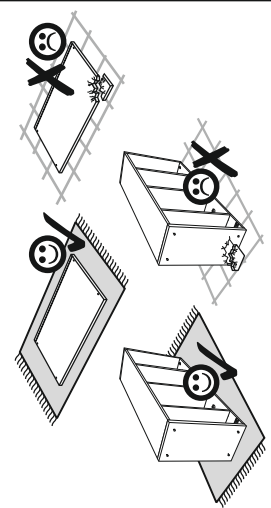
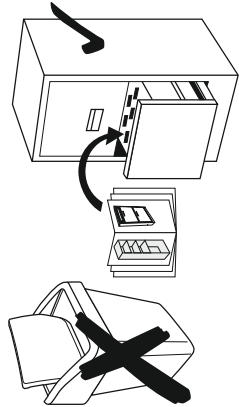
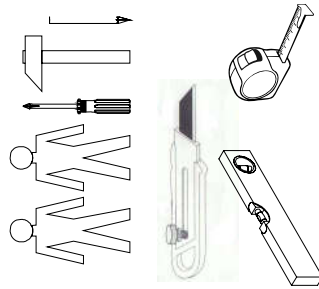
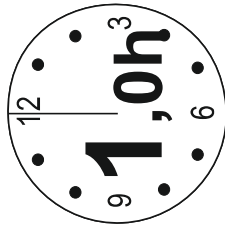


Instalation manual
ARTE: Wardrobe H1V3D


Wardrobe H1V3D

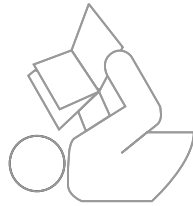


Element symbol	Dimensions				Code	Package
	1982	495	16	1		
1	1982	495	16	1	SZF 3D.002	3/3
2	1988	400	16	1	SZF 3D.003	1/1
3	1988	400	16	1	SZF 3D.004	1/1
4	1988	380	16	1	SZF 3D.005	1/1
5	820	400	16	1	SZF 3D.006	2/2
6	820	400	16	1	SZF 3D.007	2/2
7	852	284	16	1	SZF 3D.008	1/1
8	730	284	16	1	SZF 3D.009	1/1
9	484	380	16	1	SZF 3D.010	2/2
10	484	375	16	4	SZF 3D.011	2/2
11	286	380	16	2	SZF 3D.012	2/2
12	286	375	16	3	SZF 3D.013	2/2
13	360	356	16	2	SZF 3D.016	4/4
14	284	356	16	2	SZF 3D.018	4/4
15	2006	501	3	1	SZF 3D.001	3/3
16	2006	303	3	1	SZF 3D.015	1/1
17	392	40	16	2	SZF 3D.020	4/4
18	284	40	16	2	SZF 3D.022	4/4

 1x p12 4x50 mm	 8x f11 4x184 mm	 6x p70 4x27 mm	 20x e1 4x7 mm
 1x f28 4x40 mm	 1x y1	 10x p18 4x15 mm	 7x a143
 1x n14	 28x d1	 5x a31.05	 7x b119


3x	6k394	1x	z1	90x	1l	32x	f1	12x	s2
									
20x	s1	6x	p2	16x	p25	12x	r1	12x	r16
									
			nORD 01.007	ø 3x3,6 mm		ø 8x50 mm		ø 16	




1

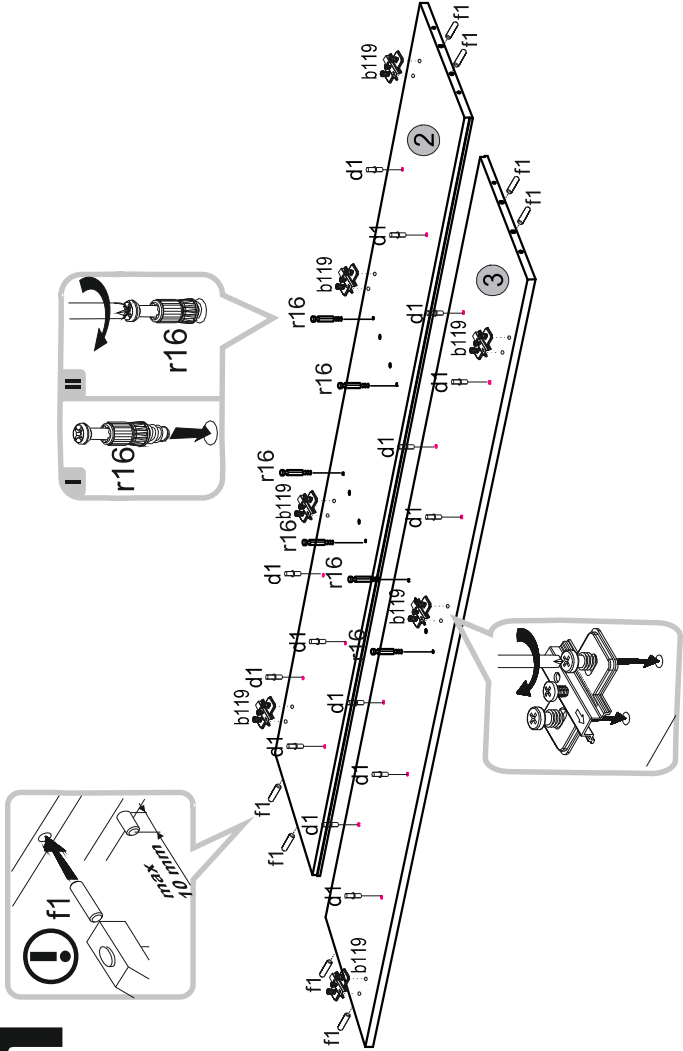


3

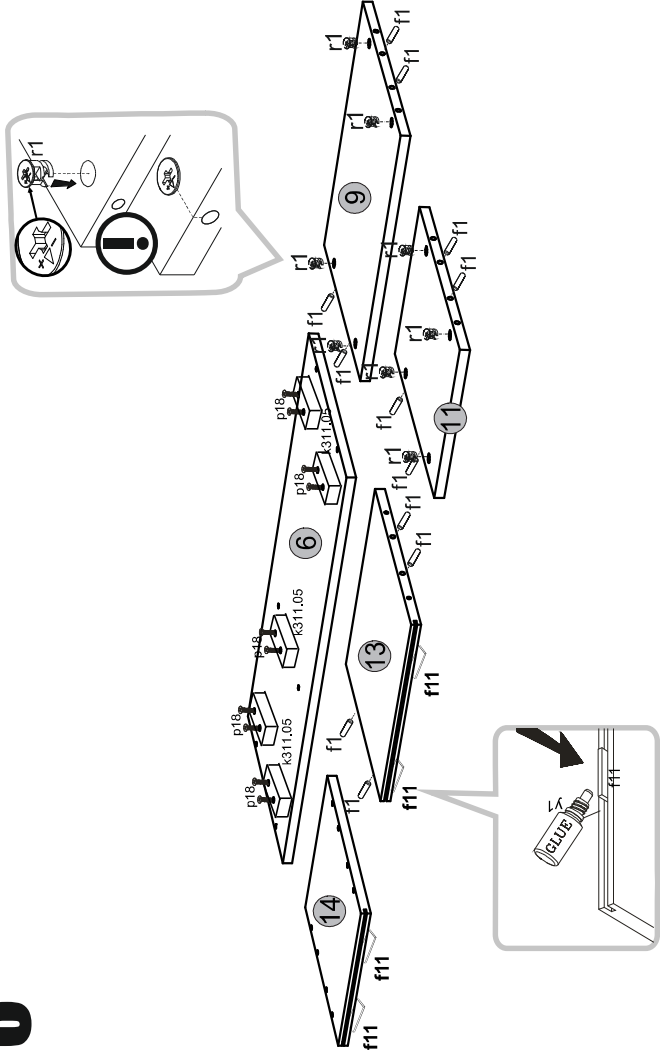


2

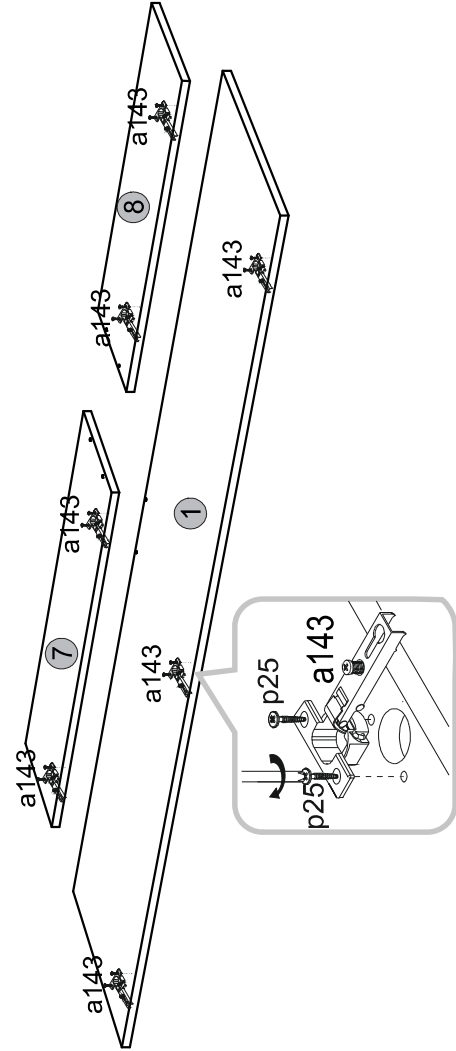


4

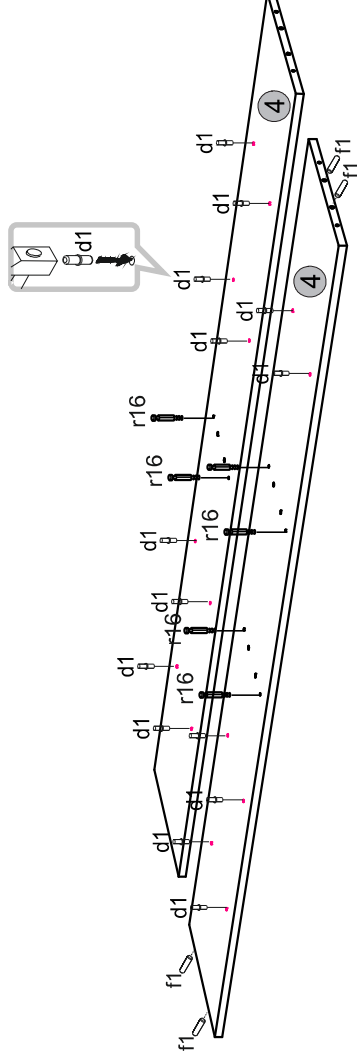


5

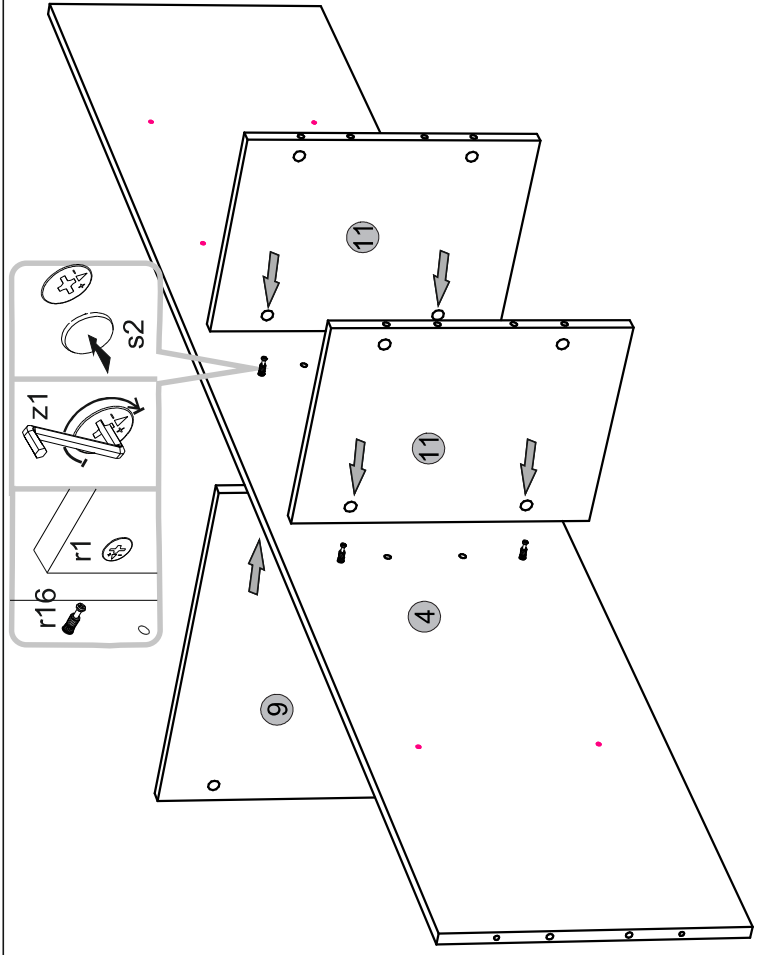


7

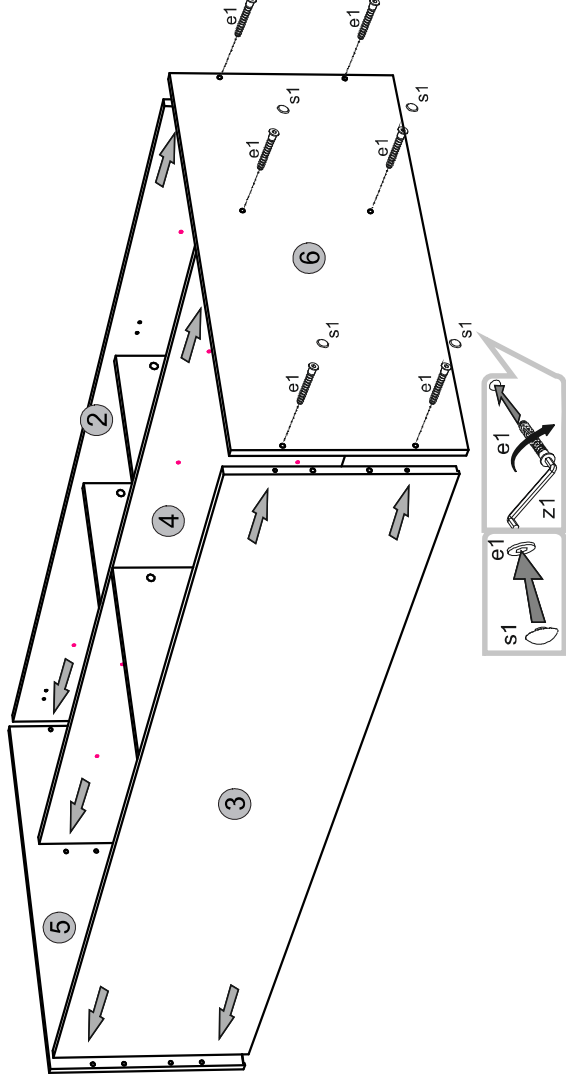

6

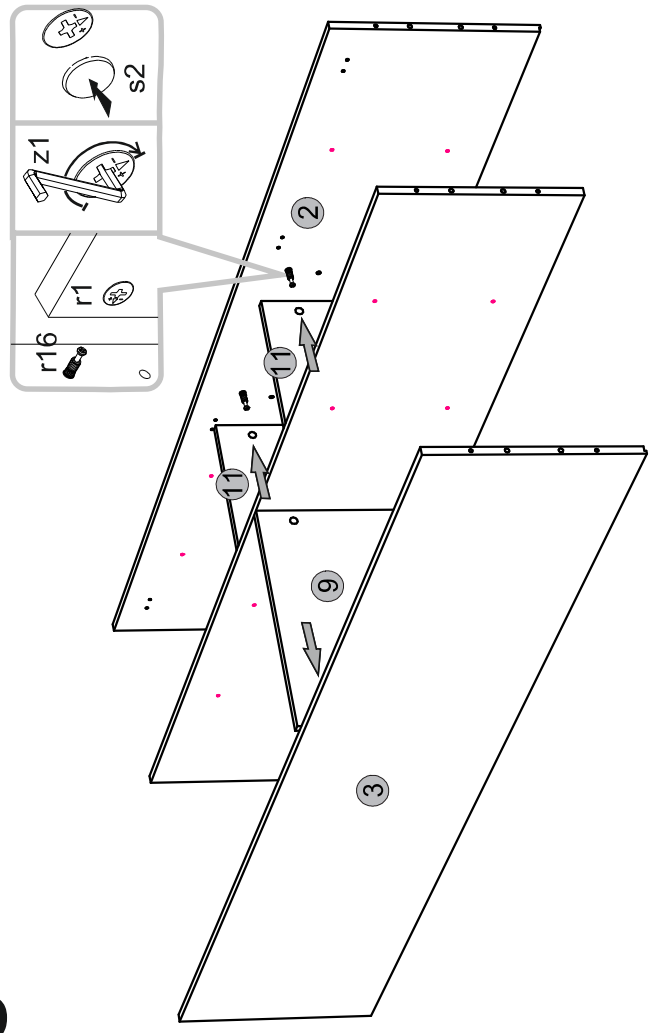


8

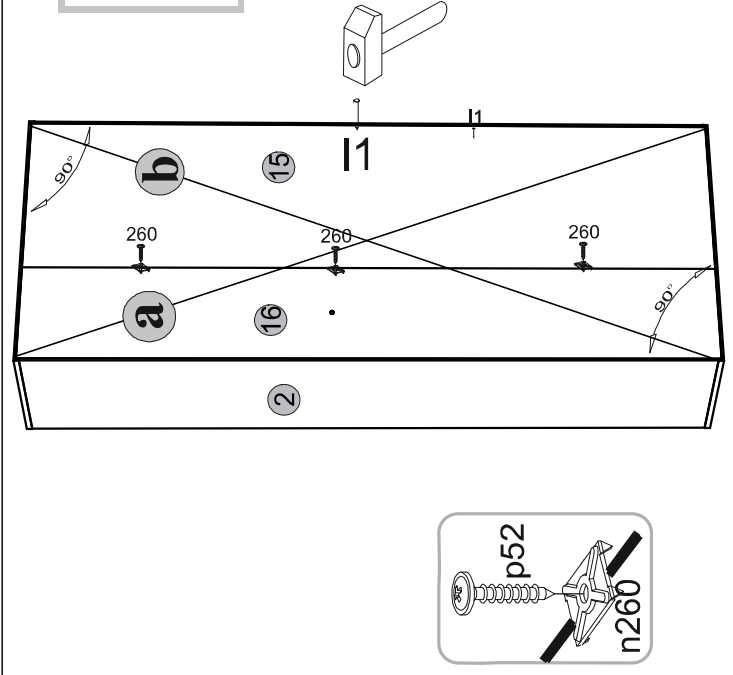

! a=b

9

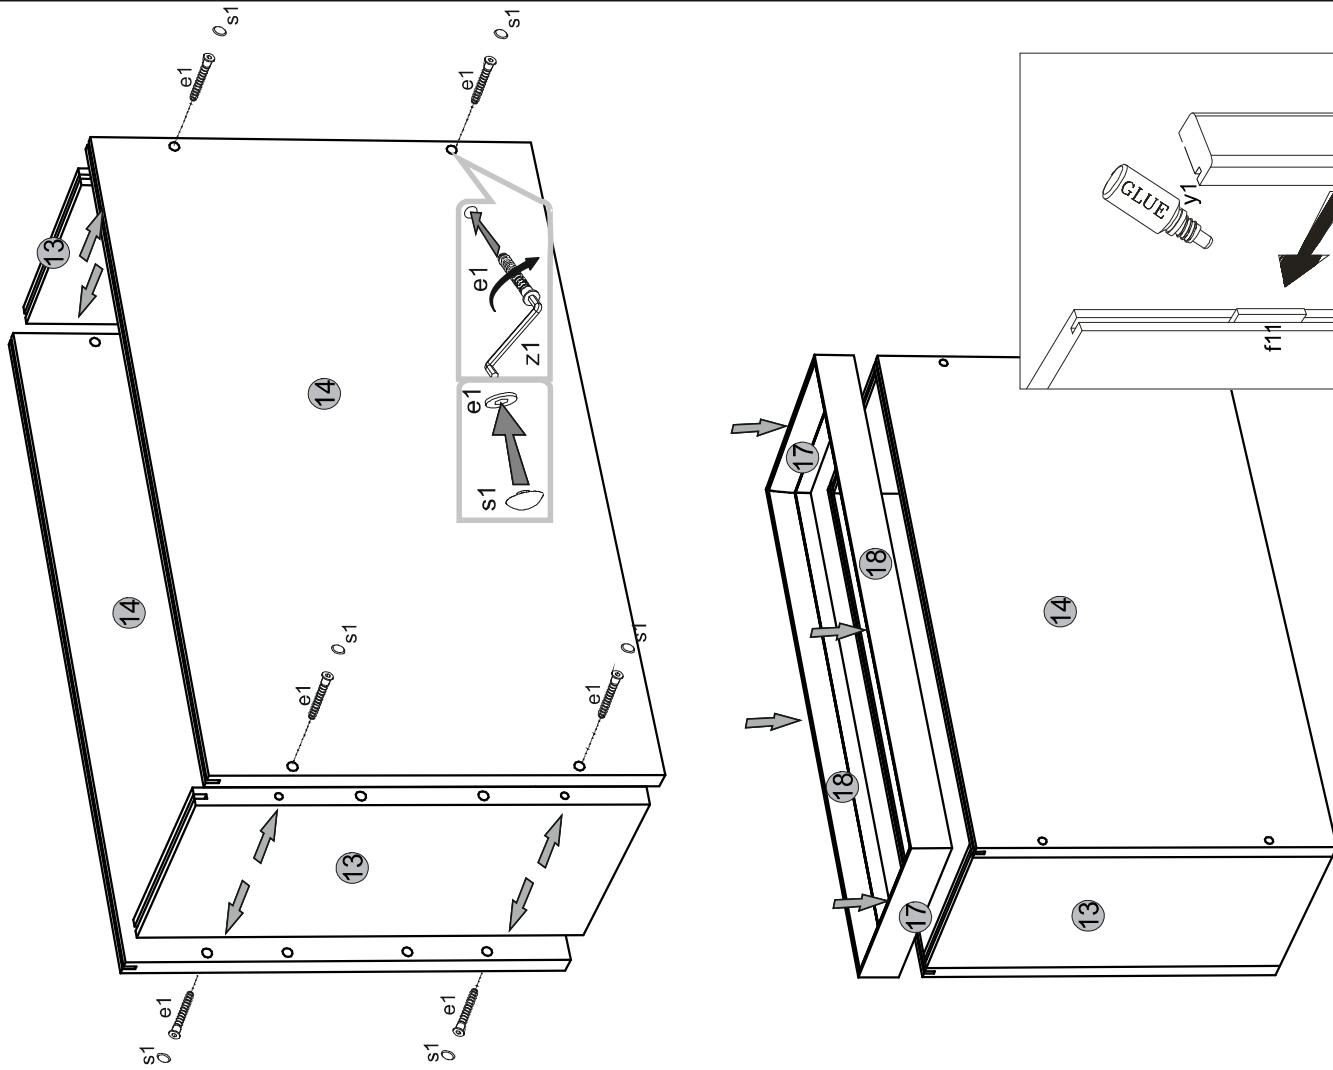

10

